



SAUSAGE WARMER

WWH10 INSTRUCTIONS

Specification:	Capacity:	Min: 2.5L, Max: 7.5L
	Voltage:	220V~240V
		1000W

Operating and Maintenance:

- * Plug unit into correct electrical socket.
- * Only use when soup or food is present. Add an appropriate amount of soup or food to a stainless steel container and maintain it between the maximum and minimum water levels.
- * A neon light will glow when the unit is turned on. Turn the dial to 0 to switch off. Unplug from the wall socket to isolate the appliance from the electrical supply.
- * Never move or carry the appliance when unit is switched on, or containing hot soup or food.
- * Spilled soup or food should be removed immediately from all exterior surfaces. The stainless steel units should be wiped over with a damp soapy cloth.
- * Ensure unit is unplugged when not in use, when filling and when being cleaned.
- * The appliance must not be cleaned with a high pressure jet.

IMPORTANT-----NEVER IMMERSE THE APPLIANCE IN WATER AS DAMAGE TO THE UNIT WILL RESULT AND THE GUARANTEE WILL BE VOIDED.

WARNING THIS APPLIANCE MUST BE EARTHED.

DO NOT OPERATE THE APPLIANCE EMPTY.

CHILDREN, THE DISABLED AND DEMENTED PERSON, AND THESE WHO ARE IN LACK OF OPERATION EXPERIENCE ARE PROHIBITED TO USE THE APPLIANCE. PLEASE TAKE GOOD CARE OF CHILDREN TO MAKE SURE THEY ARE NOT TO PLAY WITH THE APPLIANCE.



GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.ggmgastr.com info@ggmgastr.com
+49 2553 7220 0