

GGM Gastro International GmbH
Weinerpark 16 | 48607 Ochtrup | Germany

www.ggmgastro.com
info@ggmgastro.com

EX-SMC AND EX-SM MODELS

CAUTION

Before putting the unit into operation, check whether there is water in the trays located beneath the perforated plates. If this is not the case, these trays must be filled with water, taking care not to let the water overflow the upper edge of the tray.

The fact that the trays do not contain water at startup does not cause any major problems; the only consequence is that the unit has too low a humidity level, causing the food to dry out slightly.

START-UP

1. Connect the warming display to the power supply. The unit is designed for 220V and must be properly grounded.
2. Press the red power switch. As soon as it lights up, the unit is powered on.
3. Set the desired operating temperature on the thermostat's temperature scale. The green indicator light comes on, indicating that the unit is heating up. Temperature control is now handled by the device's thermostat, which activates the heating element as needed (green indicator light illuminates) or deactivates it (green indicator light turns off).
4. To turn on the device's light, press the yellow light switch, which will then illuminate along with the device's built-in lighting.
5. To turn off the appliance, first set the thermostat to zero. Then turn off the built-in lighting using the yellow switch and the power using the red switch.



GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.ggmgastro.com info@ggmgastro.com
+49 2553 7220 0