

**THERMOWAGEN Item No.:**  
**TGNP1911•TGNP2211•TGNP281**

**1**



*Please read these instructions carefully before putting the unit into service. Damage caused by failure to follow the instructions will void the warranty.*

## TECHNICAL SPECIFICATIONS

| <b>MODEL</b>    | <b>Dimensions (CM)</b> | <b>Voltage (V)</b> | <b>Hertz (Hz)</b> | <b>Power (W)</b> |
|-----------------|------------------------|--------------------|-------------------|------------------|
| <b>TGNP1911</b> | 99 (H) x 57 x 79 cm    | 220–230            | 50                | 1075             |
| <b>TGNP2211</b> | 124 (H) x 57 x 79 cm   | 220–230            | 50                | 1200             |
| <b>TGNP2811</b> | 149 (H) x 57 x 79 cm   | 220–230            | 50                | 1300             |

## TRANSPORT AND STORAGE

The unit should be handled with care during transport. Ensure that it is not subjected to excessive vibrations during transport. Never place or store this product outdoors (even if it is packaged). The device must be stored in a well-ventilated warehouse free of corrosive gases. If you must temporarily store the device outdoors in an emergency, take measures to protect it from rain or moisture.

## SAFETY AND USE

1. Remove the packaging material and all protective films.
2. The device must be set up in a well-ventilated room. The left and right sides of the device must be at least 10 cm away from any objects. The back of the device must be at least 20 cm away from any objects (e.g., a brick wall).
3. Do not place the appliance on a carpet, dish towel, tablecloth, or any other surface that cannot withstand high temperatures.
4. Make sure the ventilation grille is not blocked.
5. Plug the appliance into a grounded outlet.
6. The device's voltage (230 volts/50 Hz/1 phase) must match the mains voltage.
7. Install a suitable power switch, a fuse, and a ground-fault circuit interrupter (GFCI). Ensure that the switch is always easily accessible so that it can be operated easily in case of an emergency.
8. Never insert the plug into the outlet with wet hands. This is very dangerous.
9. Never connect the power cord to an extension cord.
10. Before use, check that all parts are present. Inspect the device for damage (pay particular attention to the wheels and push handles).
11. If the device is damaged, contact a professional electrician. Do not attempt to repair the device yourself.
12. Keep the appliance out of the reach of children.

## SAFETY INSTRUCTIONS

### DEGREASING:

1. Open the door.
2. Clean the inside of the appliance with warm water. Never clean the appliance with a high-pressure water jet. Make sure you have dried the appliance thoroughly.

## REGULAR USE

1. Always use genuine replacement parts.
2. Never cover the appliance with plastic wrap. This can cause overheating.
3. Place the appliance on a level surface.
4. When the appliance is not in use, turn it off and unplug it from the outlet. Make sure the switch is set to "OFF" before unplugging the power cord.
5. Do not leave the appliance running unattended.
6. Never move the device while it is in operation.
7. Never touch the device while it is in operation.
8. When disconnecting the device from the power source, never pull on the cord.

## PARTS OF THE DEVICE

1. Pushing handle
2. Cord/plug (extends to 4 meters)
3. Stainless steel base plate
4. Wheels
5. Door (fan and motor)
  - \* If the motor or fan is defective, please contact your dealer.

## REMOVING THE DOOR

\* If you wish to use the appliance unheated and/or unlocked, you can remove the door.

Proceed as follows:

1. Open the door.
2. Hold the door with both hands and lift it carefully.
3. Move the door carefully. Store the door in a closed room.
4. If you want to replace the door, you should do so with the help of a second person. This makes the task easier and reduces the risk of damage. If you want to do it without help, make sure to secure the four wheels with the brakes.

## CONTROL PANEL

**Switch:** ON/OFF.

**"Set":** Sets the temperature. When you press "Set" once, the display shows the maximum temperature. Then set the desired temperature. Press "Set" again to confirm. The display shows the current temperature.

## CLEANING AND MAINTENANCE

Step 1: After use, the appliance must first be turned off, and then the plug must be unplugged from the outlet. Always follow this order to avoid short circuits or other potential hazards.

Step 2: Make sure the device has cooled down.

Step 3: Clean the parts and the device with warm water. Then dry it thoroughly. Do not use gasoline, thinner, a scrub brush, or polishing powder to clean the device.

## CAUTION!

- Do not rinse the device with water.
- Never clean the device with a stainless steel brush. This will cause scratches and damage the device.
- Use a vacuum cleaner to (carefully) remove dirt and debris from the ventilation grille.
- Always store the appliance indoors and keep it dry.
- Always make sure you have unplugged the appliance from the outlet before performing any maintenance.

### If the device is not working or is damaged, check:

1. Whether the plug is plugged into the outlet;
2. Whether the plug and/or the cord is damaged;
3. Whether the microswitch is working.



In accordance with the Waste Electrical and Electronic Equipment (WEEE) Directive, waste electrical and electronic equipment must be separated, collected, and treated. If you need to dispose of this product at any time in the future, please **DO NOT** dispose of it with household trash. Please dispose of the device at a WEEE collection point.



GGM Gastro International GmbH  
Weinerpark 16  
D-48607 Ochtrup

[www.ggmgaastro.com](http://www.ggmgaastro.com)      [info@ggmgaastro.com](mailto:info@ggmgaastro.com)  
+49 2553 7220 0