 
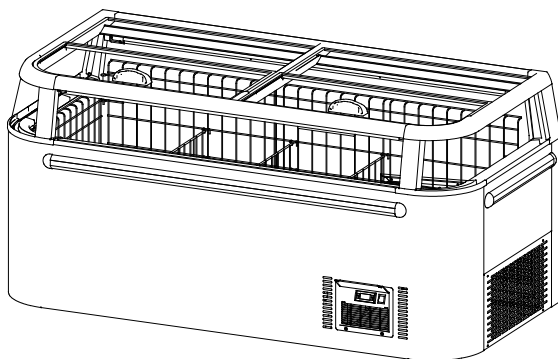 
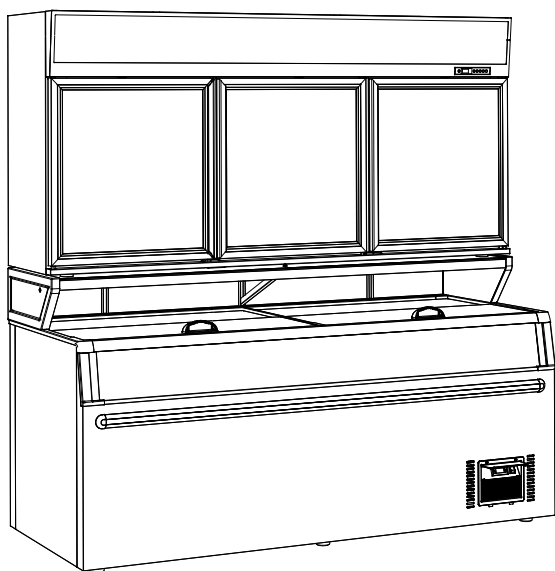 


ggm gastro

OPERATING AND INSTRUCTION MANUAL

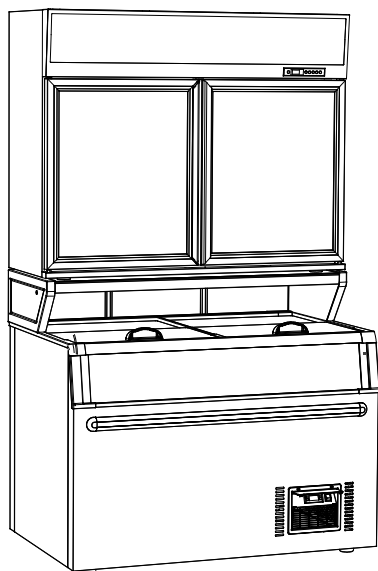

CONTENT

- SAFETY PRECAUTIONS
- HOW TO USE
- CLEANING
- SPECIFICATION
- EXPLODED VIEW
- INSTALLATION
- DECLARATION OF CONFORMITY

SAFETY PRECAUTIONS

- The purpose of the safety precautions in this manual is to ensue safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the "⚠WARNING" heading. However, the cases listed under the "⚠CAUTION" heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety

-  **WARNING** Improper handling of the unit could lead to death or serious injury.
-  **CAUTION** Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark contains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this product can easily find it.






PRECAUTIONS FOR INSTALLATION

 **WARNING**



     Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

PRECAUTIONS FOR INSTALLATION


 WARNING	
 DON'T TAMPER Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire. 	 ELECTRICAL SHOCK HAZARDS Never splash water directly onto the product or wash with water as short circuit and electrical leakage could result. 
 DANGER OF EXPLOSION Never put flammable or volatile substances into the unit as explosion and fire could result. 	 PROHIBITED Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire. 
 PROHIBITED Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire 	 FLAMMABLE Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire 

SAFETY PRECAUTIONS


⚠ WARNING



 The cooler is intended for storage and display of beer and beverage for sale. Do not use for other purpose than the intended as this could adversely affect items placed in the unit.



 Never attempt to insert fingers, sticks, etc. fan is rotating at high speed inside the outlet. Injury, electrical shock and improper operation could result.



PROHIBITED

For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.

 


PROHIBITED

Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.




Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.



CAUTION AGAINST EXPLOSION

 If you find gas leakage, please don't touch the cooler and close gas and open the door for ventilation. Gas leakage cause explosion, fire and fire injury.



Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.



Away from hot air sources. Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.



Leave disassembly and disposal of the unit to qualified experts.

 


Should the unit need temporary storage, make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.

⚠ WARNING


WELL VENTILATED PLACE

Please make more than 10cm space between cooler and wall. If there are no space, cooling capacity can drop down.



DANGER OF ELECTRICAL SHOCK

 If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.




PROHIBITED

Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.



DISCONNECT POWER CORD PLUG FROM WALL OUTLET

 Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire



DON'T PINCH FINGERS

Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.

 


DON'T TOUCH


Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.



When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possible resulting in overheating and fire.

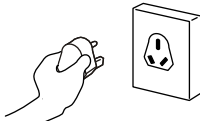

 Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.




PROHIBITED

Do not throw items onto the shelves and do not place items totaling more than 30kg on each shelf. The shelf could fall down, possibly cause injury.



 Be sure attach and secure shelves correctly. An improperly attached shelf could fall down and cause injury.



HOW TO USE

BEFORE USE

- Remove shipping package, tape, etc and leave doors open ventilation for a while.
- The unit is cleaned before shipment. However, clean the compartment interior once after delivery
- Please insert power supply plug into the wall outlet, single-phase to cat voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

- Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur

TEMPERATURE ADJUSTMENT

- The ambient of climatic class 0,1,2,3,4,6,8 is 32 Degree C.
For island freezer, the interior temperature will be kept at -22~-18℃ under +25℃ ambient temperature. If the ambient temperature is extremely high or the stuffing food inside is too much, that might cause the interior temperature a little bit higher. So, it would be better to adjust the digital controller by setting a lower temperature so as to maintain the right temperature. On the opposite, if the ambient temperature is very low or empty loaded, or in less food storage, the interior temperature might be able to reach minus -30℃, and in return to cause the evaporator ice up; Thus, it would be better to re-adjust the digital controller by setting a higher temperature.

DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- Water in the drain tray is evaporated automatically. In humidity, large amount of water in the drain tray, so please throw away drain water once a day.

EFFICIENT USE

Please follow the below instruction, you could save energy.

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in the place which is well-ventilated.

SHELF HEIGHT ADJUSTMENT

The shelf height can be adjusted

- Arrange the shelves in accordance with the dimensions of the items to be placed in the cooler.

DISPOSAL OF WASTE FOAM

The waste flammable insulation foam should be sent to the place designated by specialized personnel.

PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
- Place items evenly on all shelves.
- Please do not display goods on the bottom. Please put goods on the shelf.

CLEANING

⚠ WARNING

To prevent any electrical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.

 
EXTERIOR AND COOLER COMPARTMENT

- Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent. Then wipe with a cloth that has been dipped in water.

⚠ WARNING

WARNING: Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at times.
- Never use polishing powder, soap powder, benzene, Oil or hot water as these will damage the painting and Plastic components

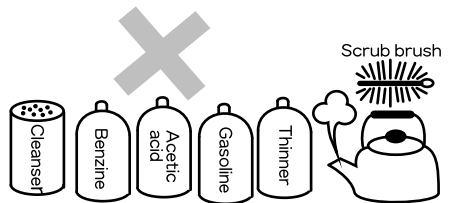

CHECKS

To ensure the safety, perform the following checks after cleaning.

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

In case the unit shows operating problems,
check the following prior to calling the authorized service company:

SYMPTOMS	POSSIBLE CAUSE	SOLUTION
The unit is not operating	Faulty electrical contact	Verify electrical connections
	Poor electrical power	Check the power connection and electrical outlet
	Thermostat setting "0"	Change the thermostat setting to a higher number
Not reaching desired temperature	Unit is exposed to direct sun light	Relocate the unit to a shaded area
	Thermostat is not properly adjusted	Adjust the thermostat setting to a higher number
	Clogger condenser	Review Maintenance instructions listed in the manual
	Blocked grills	Clean the grills of any debris collected
	Door not properly closed	Check the leveling of the unit and door seal
	Products poorly distributed or excess product load	Redistribute the product load according Start instructions
	For Models with electronic temperature controller, indicates E0 or E1	Unplug the unit from the outlet. If the error continues, contact an authorized service technician
Abnormal noises	The unit is not properly level	Level the unit following the Installation instructions
	Friction with other objects	Move the unit and avoid contact with other objects
Water on the floor	Drain hose is outside of the drain pan	Locate the hose in the drain pan

WARRANTY & SERVICE

- Warranty is valid for one year from the date of purchase.
- The warranty covers defective parts and workmanship. The following items are not covered under warranty:
 1. Loss of products.
 2. Damages caused by transportation.
 3. Damages caused by modifications made by unauthorized individuals.
 4. Fluorescent lights, glass parts or plastic component parts.
 5. Worn out plugs or defective electrical components.
 6. Maintenance of the unit.
- Warranty is valid showing the purchase receipt.
- We offer a professional service network which offers the necessary technical support for your unit.

-WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

-WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

-WARNING: Do not damage the refrigerant circuit.

-WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

-WARNING: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

-WARNING: Children shall not play with the appliance.

-WARNING: Cleaning and user maintenance shall not be made by children without supervision.

-WARNING: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The following warnings only used for the product with refrigerant R290

-WARNING: Equipment is only allowed to transport and place in the normal way, during transportation, we need to ensure heat from sun radiation to equipment is not more than 60 °C, so as to protect refrigeration unit.

-WARNING: Equipment should be installed in a well-ventilated place, avoid larger thermal radiation. (Prohibit in front of a heater or heating equipment)

-WARNING: For any types of maintenance and well-keeping, need to stop power supply first, and professional personnel is required.

-WARNING: R290 discharge is only allowed to operate in well-ventilated room or outdoor, open flame is prohibit.


-WARNING: LED light is not allowed to replace by oneself, but by professional maintenance personnel.

SPECIFICATION

	Model	TIEGIC2/TIEBIC2	WTGIC2/WTBIC2	TIEGIC3/TIEBIC3	WTGIC3/WTBIC3	TIRGIC/TIRBIC
Basic information	Voltage/H	220V~240V/50Hz	220V~240V/50Hz	220V~240V/50Hz	220V~240V/50Hz	220V~240V/50Hz
	Refrigerant	R290	R290	R290	R290	R290
	Foaming agent	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane
	Temperature	-18~-22℃	-18~-22℃	-18~-22℃	-18~-22℃	-18~-22℃
	Rated power (W)	420	650	500	820	460
	Energy consumption (kW·h/24h)	7.07	14.47	10.88	20.12	9.64
	Gross volume (L)	575	373	900	559	745
	Net volume (L)	402	232	646	346	523
	External dimension(W*D*H) (mm)	1454*850* (870+210)	1450*590*1022	2104*850* (870+210)	2100*590*1022	1850*850*870
	Internal dimension(W*D*H) (mm)	1303*691*733	1330*390*645	1953*691*733	1980*390*645	1682*691*733
	Packing dimension(W*D*H) (mm)	1584*994*1205	1540*660*1155	2234*994*1205	2190*660*1155	1933*994*1010
	Net weight (kg)	121	139	158	188	129
	Gross weight (kg)	163	149	213	203	175
	Loading qty in 40HQ	28	48	24	36	24
Appearance	Glass door	4pcs LOWE Tempered glass	3 layer double tempered heated glass	4pcs LOWE Tempered glass	3 layer double tempered heated glass	4pcs LOWE Tempered glass Triple layers tempered glass with two Low-E film
	Door handle	Yes	Yes	Yes	Yes	Yes
	Body color	Grey	Grey	Grey	Grey	Grey
	Foaming thickness (mm)	70	60	70	60	70
	Internal material	Embossed aluminum	Painted aluminum	Embossed aluminum	Painted aluminum	Embossed aluminum
	K clip	/	Yes	/	Yes	/
	K strip	/	Yes	/	Yes	/
	Baskets/ Partitions /Shelves (pcs)	Partition/ 2	Shelves/ 4	Partition/ 4	Shelves/ 6	3
	Price tag	Yes	Optional	Yes	Optional	Yes
	Light box	No	Yes	No	Yes	No
	Bumper bar	Yes	No	Yes	No	Yes
	Lock and key	No	No	No	No	No
	Adjustable legs	Yes	No	Yes	No	Yes
	Electrical system	Thermostat	Digital	Digital	Digital	Digital
Cooling system		Static cooling	Fan cooling	Static cooling	Fan cooling	Static cooling
Defrost type		Automatic	Automatic	Automatic	Automatic	Automatic
Evaporator		Roll bond	Finned type	Roll bond	Finned type	Roll bond
Evaporator fan motor		/	Yes	/	Yes	No
Condenser		Wire type	Wire type	Wire type	Wire type	Wire type
Condenser fan motor		Yes	Yes	Yes	Yes	Yes
Compressor		Secop	Secop	Secop	Secop	Secop
Light in canopy		/	LED	/	LED	/
Light in cabinet		LED * 2	LED * 3	LED * 2	LED * 4	LED * 2

TIRGIC / TIRBIC_Spare parts list


.	/-0/-/-2---03	W6A'B. 52P*P1+0*-5	Al i oe'kaib	/	mi
/	/-/-2---1.26	W6A'B. 52P*P1+3*-5	7' n' di'p'pal i o	/	mi
0	/-/-2---1.25	W6A'B. 52P*P1+0*-0'	Gd kq'd'p'pal i o'ddeq	/	mi
1	/-0/-/-...5	W6A'B. 52P*P1+e'w/2	Mf b'q'd	/	mi
2	/-0-0-4---34	Q'-460'	7i' n' h iBA i'deq	/	mi
3	/-0-0-4---7.0	Q'-55'-	Gd kq'l BA i'deq	/	mi
4	/-/-0-0---2...	W6A'B. 52P*P1+e'w...>	Mu'd'k	0	mi
5	/-/-0-0---2.04	W6A'B. 52P*P1+e'w...7.	7i' q'dj p'ebic	/	mi
6	/-0-0-...6.	Q5'-4U 0	E'b'q'd i t'ib	/	mi
7	/-/-0-0---136	W6A'B. 52P*P1+e'w/-	Q'o'nb'q	/	mi
..	/-0-0-/-2-5	W6C'-7/-+	@ kab'ki oc'k' i q' o	/	mi
..	/-0-0...1'-01-	Q'-0-0.	@ kab'ki oc'j i q' oc'k' i'ab	/	mi
..	/-0-0-...-2.	P @ 5'K U	@ i' n'bbp i o	/	p'bz
1	/-0-0-5---3.	Q'm'030'	M i t' bome'd	/	mi
2	/-0-1-2---...1	CA @2'AN'> .-3A'Q'> / &	P i B'k i s' s'ab	/	mi
3	/-0-1-1---...0	Q'7/-D	A'abod'p'o	/	mi
4	/-/-0-...3/35	W6A'B. 52P*P1+e'w...>	B'kd'k d i j i' s'bo	/	mi
5	/-0-1-1'-...11	W6A'1/-...P.P. +2'-...	@ kab'ki o	/	mi
6	/-0-0-3---24	D i 7/1'. 42'P	i BA a'dib	/	mi
/-	/-0-...0'-/-2/	Q'-0-0.	>ag'p'f'ib d'bz	1	mi
/.	/-0-0-...-1.	Q'-7/-@	i k'eq'p' f'q e	/	mi
//	/-0-0-0'-...04	MW6B 3 E- '3A'Q'w-WR2/6&	@'bz i' k'p'i k'ib	/	mi
/0	/-/-0-0-...2-4	W6A'B. 52P*P1+0*-6'	7i' q'dj p'ebic >	/	mi
/1	/-4-6---...6.		D i'p'pal i o'p'n' bo	1	mi
/2	/-/-0-0---2.05	W6A'B. 52P*P1+e'w...6'	7i' q'dj p'ebic /	/	mi
/3	/-/-2-...1.4/	W6A'B. 52P*P1+0*-...1?	Gd kq'd'p'pal i o'ib'q	/	mi

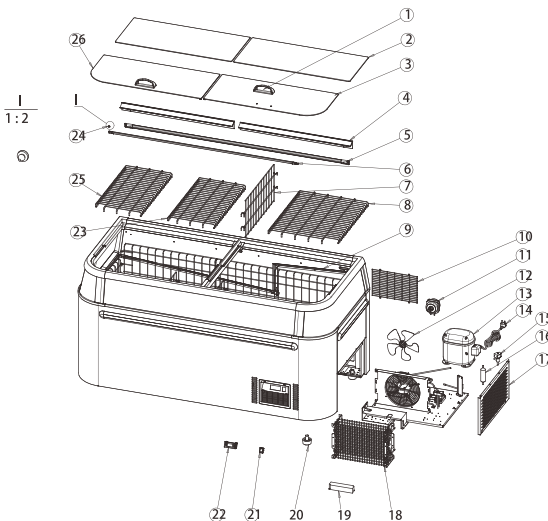 

EXPLODED VIEW


WTGIC2 / WTBIC2_Spare parts list

Kl +	Mq@ ab	Ao't škd Kl +	Mrap'k'y' b	NQ/	Rikq
.	/-0-0-5~--13	Qm'03 6	M't bonir d	.	m
/	/-0-0-1~--45	Q /' /' 51 4	Qp'kpd g bo	.	m
0	/-0-0-3~--30	D/ 1 /' /' 1- 42'0	I BA adiboo	.	m
1	/-0-1-2~--1	CA(B2'AN' - 'SAQ' > / &	PI škl š s'ab	.	m
2	/-0-1-1~--0	Q /' /' -D	Aavodidpo	.	m
3	/-0-0- /' 2~3	VMQ' 0+	@ kaskpl oc'k j l d o	.	m
4	/-0-... 1~--006	Q ~'0.	@ kaskpl oc'k j l d o, 'ab	.	m
5	/-0-1- /' ~--2	QK' 12+2~	@ kaskpl o	.	m
6	/-0-0-...~41	P@ 2@K Uf	@ j mtdpd o	.	pbq
..	/-0- /' 4~--5	Q@Q' /	B'nt oq o' l sbo, 'phq	/	m
...	/-0-1-...~1	QK' 12+ /' ~	B'nt oq o	.	m
./	/-0-0- /' ~--1	/-057 /U' ~	B'nt oq oc'k j l d o	/	m
.0	/-0-...0~--6.1	Q ~'0SD	@kl m' l BA šleq	.	m
	/-0-...0~--6.2	Q ~'0SD	@kl m' l BA šleq /	.	m
.1	/-...3~--363	QK' 12P+6~	@kl m'	.	m
.2	/- /' 5~--016	QBP, 12+~'0-	@kl m' l sbo	.	m
.3	/-0-0-0~--3	PC / 52	Ašlšk' oq l pr'q	.	m
.4	/-0-0-...~5	Q ~' /' -	C'k šl šq e	/	m
.5	/-...2~--1~...	QK' 12+3~--1E	D'špal l ošq	.	m
.6	/-...2~--1~ /	QK' 12+0~--1E	D'špal l ošleq	.	m
/-	/-0- /' 5~--15-	QK' 12+0~--3IE	All o d'phq	/	m
/.	/	/	/	.	m
//	/-0-0-4~--015	Q ~' - 0-2	I BA šleqibq	.	m
/0	/-0-0-4~--016	Q ~' - 0-3	I BA šleqibq	.	m
/1	/-0-...3~--406	Q we' -0A	H' šm	.	6 m
/2	/- /' ~--163	QK' 12 š we' / D.	Pešic	1	m
/3	/-0-...1~--4 / 3	QBP, 12+ ~	Gd kqab l oq k m'kba	.	m
/4	/-4-6~--...	5	Pm' bo	5	m

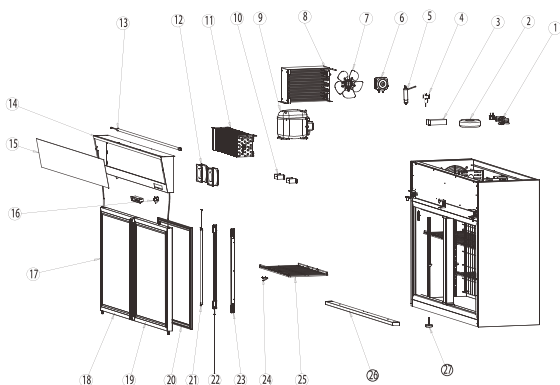 


TIEGIC2 / TIEBIC2_Spare parts list

Kl +	Mq@ ab	Ao't škd Kl +	Mrap'k'y' b	NQ/	Rikq
.	/-0- /' 2~--03	WA'9 -1P+0~5	All o e'kaib	/	m
/	/-...2~--1.23	WIA'1. 12P/P1+3~--7	? š h d'špal l o	/	m
0	/-...2~--1.21	WIA'1. 12P/P1+0~--7	Gd kqpl špal l o	/	m
1	/-0- /' ~-- / 3	WIA'1. 12P/P1+we' / 2	M'f b'qd	/	m
2	/-0-0-4~--35	Q ~'4600	? š h l BA šleq	.	m
3	/-0-0-4~-- / 6	Q ~'55-2	Gd kqpl BA šleq	.	m
4	/- /' 0~--130	WIA'8. 52P/P1+we' ~	M'špš k	/	m
5	/- /' 0~-- / 13/	WIA'8. 52P/P1+we' ~	? š l j pešic	/	m
6	/-0-0- /' ~-- /	Q 5 / 6 > 0	E špš d t šb	.	m
..	/- /' 0~--136	WIA'8. 52P/P1+~' /	Q' špš k	.	m
...	/-0-0- /' 2~6	WIC ~' /' -6	@ kaskpl oc'k j l d o	.	m
./	/-0-...1~--01-	Q ~'0.	@ kaskpl o j l d oc'k j l s'ab	.	m
.0	/-0-0-...~41	P@ 2@K Uf	M' l mtdpd o	.	pbq
.1	/-0-0-5~--3	Qm'030-	M' l bonir d	.	m
.2	/-0-1-2~--1	CA(B2'AN' - 'SAQ' > / &	PI škl š s'ab	.	m
.3	/-0-1-1~--0	Q /' /' -D	Aavodidpo	.	m
.4	/- /' 0~-- / 30	WIA'8. 52P+~	B'ndid l j ' l sbo	.	m
.5	/-0-1- /' ~-- /	WIA' /' -P/P +2~	@ kaskpl o	.	m
.6	/-0-0-3~--24	D/ 1 /' /' 1- 42'0	I BA adiboo	.	m
/-	/-0-...0~-- / 2	Q ~'0.	> aq pš j b dšq	1	m
/.	/-0-0-...~1	Q ~' /' - @	I šleqpt šq e	.	m
//	/-0-0-0~--04	WIA'8. 52P/P1+we' / 6	@kl m' l sbo	.	m
/0	/- /' 0~--133	WIA'8. 52P/P1+we' / 6	? š l j pešic /	.	m
/1	/-4-6~--...	6	D'špal l o p'm' bo	1	m

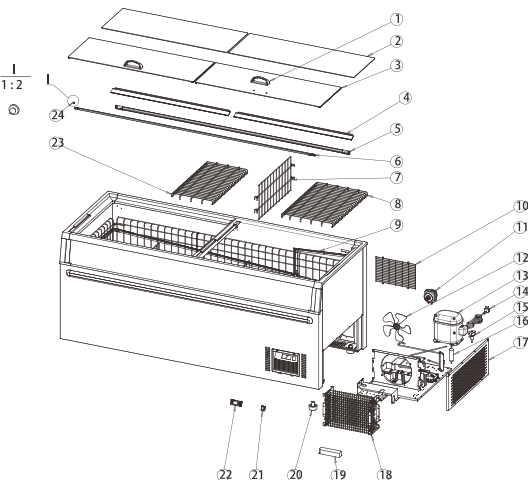 


WTGIC3 / WTBIC3_Spare parts list

Kl +	Mq@ ab	Ao't fkd Kl +	Mopk'j' b	NQ/	Rikq
.	/-0-0-5*--13	Qm'03 6	M't bonr d	.	mi
/	/-0-0-1*-45	Q-/5I 4	Q'k'pd g bo	.	mi
0	/-0-0-3*-24	DJ 1/1'-42*/	I BA adfbo	.	mi
1	/-0-1-2*-..1	CA@2*AN* -BA/C> /&	PI lkl fa s'f'sb	.	mi
2	/-0-1-1*-..0	Q-/1'-D	Aoobcdpbo	.	mi
3	/-0-0-1*-..//	WQ2' 0 0	@ kakt'p oc'k'j' l q o	/	mi
4	/-0-..1*-006	Q-^0.	@ kakt'p oc'k'j' l q o, 'f'ab	/	mi
5	/-0-1-1*-..5	QPI A20*-2*-..	@ kakt'p o	/	mi
6	/-0-0-1*-..1/	P@/ @K U/	@ j' mdp' o	.	pbq
.	/-0-1-4*-..5	Q@Q*-	B'f'nt o'q o l s'bo, 'f'pbq	/	mi
..	/-0-1-1*-..23	Q'f' / - + f' -	B'f'nt o'q o	.	mi
./	/-0-0-1*-..1	/ -057/U*-	B'f'nt o'q oc'k'j' l q o	0	mi
0	/-0-..0*-6.1	Q-^05C	@kl mv I BA ldeq	.	mi
	/-0-..0*-6.2	Q-^05CI	@kl mv I BA ldeq/	/	mi
.1	/-..3*-4.4	Q'f' / - + f' -	@kl mv	.	mi
.2	/-5*-5*-534	Q@/ / - - +0-	@kl mv l s'bo	.	mi
.3	/-0-0-0*-..3	PCV/52	Aldk'p q'p'q l p'q'q	.	mi
.4	/-0-0-1*-..5	Q-^1'	C'k' p' f'q e	0	mi
.5	/-..2*-1-31	Q'f' / - + 3*-1 E	D'f'p'p' l o'boq	.	mi
.6	/-..2*-1-30	Q'f' / - + 0*-1 E	D'f'p'p' l o'boq	.	mi
/-	/-0-1-5*-11.	Q'f' / - + 0*-3I >	A l l o'p'q'q	0	mi
/.	.	.	.	.	.
//	/-0-0-4*-015	Q-^..0-2	I BA ldeq'boq	.	mi
/0	/-0-0-4*-016	Q-^..0-3	I BA ldeq'boq	.	mi
/1	/-0-..3*-406	Q'v*-0A	H' l'm	/4	mi
/2	/-/-/-*-164	Q'f' / - + v*- / D/	J fa'p' p'ebic	1	mi
/3	/-/-/-*-165	Q'f' / - + v*- / D.	I 'q'p' p'ebic	/	mi
/4	/-0-..1*-43/	Q@/ / - - + -	Cd kq'ab l o'q' l m'f'k'is	.	mi
/5	/-4-6*-..55		Pm' bo	6	mi

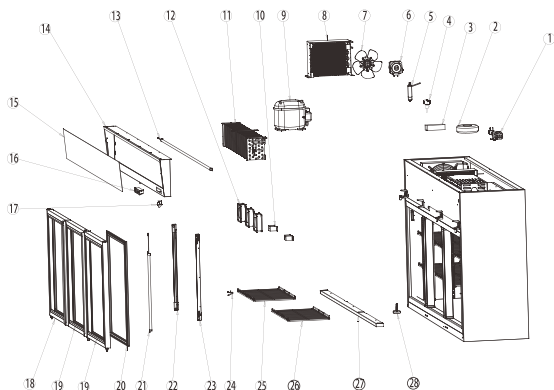 

TIEGIC3 / TIEBIC3_Spare parts list


Kl +	Mq@ ab	Ao't fkd Kl +	Mopk'j' b	NQ/	Rikq
.	/-0-1-2*-03	WV*19-1P+0*-5	Al l oe'kaib	/	mi
/	/-..2*-1.1.3.	VEA*1/ / - P*P1+3*-7	7'f' b'd'f'p'p' l o	/	mi
0	/-..2*-1.1.3.	VEA*1/ / - P*P1+0*-7	Cd kq'ab l o'p'p' l o	/	mi
1	/-0-1-1*-..1/	VEA*1/ / - P*P1+ve/2	Mf' b'q'd	/	mi
2	/-0-0-4*-..4-	Q-^4602	71'f' h I BA ldeq	.	mi
3	/-0-0-4*-..1	Q-^55-0	Cd kq'ab I BA ldeq	.	mi
4	/-0-0-1*-130	VEA*B.52P/P/ +ve*..	Mdp'f' k	1	mi
5	/-0-0-1*-13/	VEA*B.52P/P/ +ve*..	71 q'j' p'ebic	.	mi
6	/-0-0-1*-..6/	Q-5*-C 0	E'b'q'd' t' f'bo	.	mi
.	/-0-0-1*-136	VEA*B.52P/P/ +ve*..	C'k'p'q'q	.	mi
..	/-0-0-1*-2..6	VVC -1/- 6	@ kakt'p oc'k'j' l q o	.	mi
./	/-..0-1*-01-	Q-^0. >	@ kakt'p oc'k'j' l q oc'k'j' 'f'ab	.	mi
0	/-0-0-1*-..1/	P@/ @K U/	@ j' mdp' o	.	pbq
.1	/-0-0-5*-..3.	Qm'03Cv	M't bonr d	.	mi
.2	/-0-1-2*-..1	CA@2*AN* -BA/C> /&	PI lkl fa s'f'sb	.	mi
.3	/-0-0-1*-1*..0	Q-/1'-D	Aoobcdpbo	.	mi
.4	/-0-0-1*-..30	VEA*B.52P+*-..>	Bk'd'f'bo d l j' l s'bo	.	mi
.5	/-0-1-1*-..1/	VEA*1/ / - P*P1+2*-..	@ kakt'p o	.	mi
.6	/-0-0-3*-24	DJ 1/1'-42*/	I BA adfbo	.	mi
/-	/-0-..0*-2/	Q-^0.	>ag p'q'f' b'd'q'q	3	mi
/.	/-0-0-..*-..1	Q-^1'-@	I ldeq'q' f'q e	.	mi
//	/-0-0-0*-..04	MV06 B-E. 1MVAW2/6dx	@b'd' l k'p' l'bo	.	mi
/0	/-0-0*-..133	VEA*B.52P/P/ +ve*6	71 q'j' p'ebic/	1	mi
/1	/-4-6*-..6.		D'f'p'p' l o'p'p' bo	1	mi

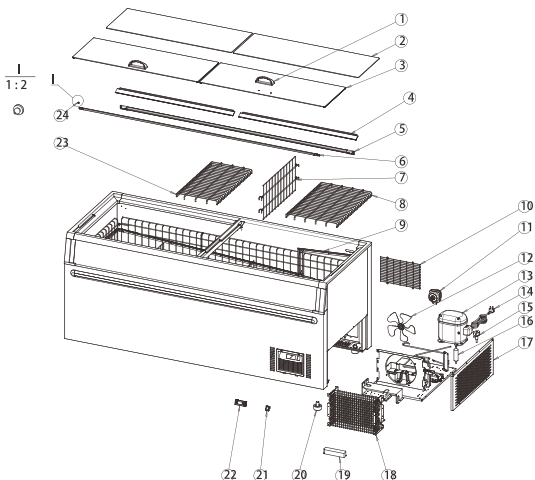 


INSTALLATION

Combi-Cabinets Stacking Instructions


 
1、Place the island cabinet (bottom cabinet) on a steady position.

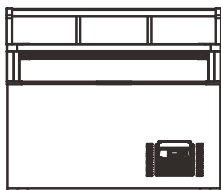

 
2、Lift the top cabinet and place it above the platform of the bottom cabinet, adjust the position. The top cabinet is heavy, please pay attention to safety during installation.

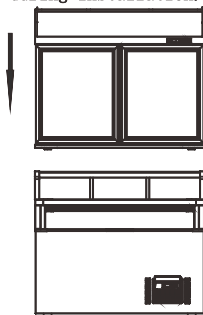

  3、After aligning the hole location at the bottom cabinet and the top cabinet, as pictures shows, Screw up the adjustable foot (M8x50) to the hole position indicated, fix the top cabinet on the platform steadily. The operation requests helper steady the top cabinet.

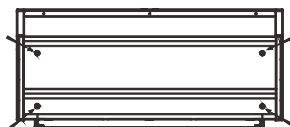
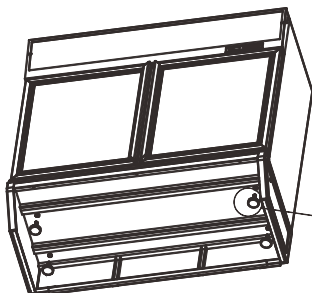


Bottom view of countertop

 

Adjustable foot (M8x50)

  4、The correct stacking state is: as shows, the back of the top cabinet and bottom cabinet shall be aligned, and the two sides shall be aligned.

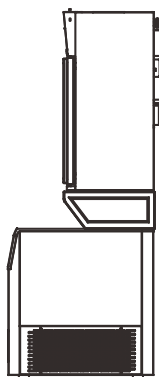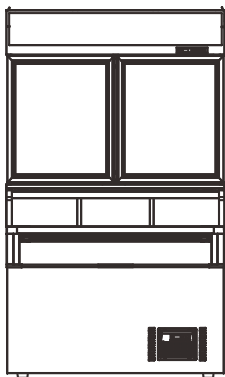

DECLARATION OF CONFORMITY



EU DECLARATION OF CONFORMITY

THIS DECLARATION OF CONFORMITY IS ISSUED UNDER THE SOLE RESPONSIBILITY OF GGMgastro International GmbH.

WE, GGMgastro International GmbH
Weinerpark 16
48607 Ochtrup (Germany)

DECLARE UNDER OUR SOLE RESPONSIBILITY THAT THE FOLLOWING PRODUCTS

- **TRADEMARK:** ggmgastro
- **PRODUCT DESCRIPTION:** cooling equipment
- **MODEL :** TIEBIC2, TIEGIC2, TIEBIC3, TIEGIC3, TIRBIC, TIRGIC
WTBIC2, WTGIC2, WTBIC3, WTGIC3

- **SERIAL NUMBER:**

ARE IN CONFORMITY WITH THE FOLLOWING EUROPEAN DIRECTIVES:

- 2006/42/EC (MD - Machinery Directive)
- 2014/30/EU (EMC - Electromagnetic compatibility)
- 2011/65/EU, 2015/863/EU (RoHS - Restriction of the use of certain hazardous substances)
- (EU) 2019/2018, (EU) 2019/2024 (Energy labelling and Ecodesign Regulation)

THE AFOREMENTIONED DIRECTIVES ARE SPECIFIED WITH BELOW STANDARDS:

- EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019+A15:2021+A16:2023
- EN IEC 60335-2-89:2022+A11:2022
- EN 62233:2008
- EN IEC 55014-1:2021
- EN IEC 55014-2:2021
- EN IEC 61000-3-2:2019+A1:2021+A2:2024
- EN 61000-3-3:2013+A1:2019+A2:2021+AC:2022-01

AUTHORISED PERSON FOR AND ON BEHALF OF GGMgastro International GmbH:

Ruben Inan
Purchase Manager

Areo Hanoun Saado
Quality Manager

DATE: 14,07,2025

PLACE: Ochtrup



GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.ggmgaastro.com

info@ggmgaastro.com

+49 2553 7220 0