

User Manual for the HEATED DISPLAY CASE

WS2SNR



WS3SNR



Thank you for purchasing this product and for the trust you have placed in us. Please read the user manual carefully before use and keep it in a safe place for future reference.

INTENDED USE

These heated display cases have been specially designed for food service and serving counters. They are intended for keeping food products warm and displaying them at temperatures ranging from +30°C to +90°C. This heated display case is not intended for heating food. All products placed on display must be introduced at their specified temperature. Any other use is considered improper. It is intended for use only in dry indoor environments. The unit is intended for commercial use, e.g., in restaurant kitchens, cafeterias, hospitals, and commercial establishments such as bakeries, butcher shops, etc., but not for the continuous mass production of food. Any other use or modification of the appliance is not in accordance with its intended purpose and is strictly prohibited. No liability can be accepted for damage resulting from improper use or incorrect operation.

General Information

The user manual contains all relevant information regarding the assembly, startup, and maintenance of the appliance and must be kept in a safe place.

Familiarity with the safety rules ensures your own safety and the correct use of the appliance.

SAFETY

*To avoid hazards and ensure optimal efficiency, please do not make any modifications or alterations to the device without the manufacturer's consent.

Please use the device only in a technically suitable environment and under safe conditions.

*Never leave the device unattended during operation. Also, keep it out of the reach of children.

*Keep the user manual in a safe place. If you transfer or sell the device, the user manual must be included with the device.

*For their own safety, all users of the device must follow the instructions in the manual.


*The device is intended for indoor use only.

*Any type of intervention, including installation and maintenance, requires the assistance of a qualified service technician.

Warnings:

- Ensure adequate protection against electric shock and harmful water ingress.

- This device must not be cleaned with a water jet.
- The control panel must be connected only to the specified devices to avoid potential hazards.
- The labels may be affixed near the device after installation.
- This device may be used by children 8 years of age and older, as well as by persons with reduced physical, sensory, or mental capabilities, or a lack of experience and knowledge, provided they are supervised or have been instructed on the safe use of the appliance and understand the resulting hazards. Children must not play with the appliance. Cleaning and user maintenance must not be performed by children unless they are over 8 years of age and under supervision. Also, keep the packaging films out of the reach of children. There is a risk of suffocation.
- Children under 8 years of age must be kept away from the device and the power cord.
- If the power cord or the appliance is damaged, it must be replaced or repaired by the manufacturer, customer service, or a similarly qualified person to avoid hazards.
- This appliance is intended for commercial and similar applications, such as in the kitchens of restaurants, cafeterias, hospitals, and commercial establishments such as bakeries, butcher shops, etc., but not for continuous mass production of food.
- This appliance is designed for the display and preservation of items at a controlled, elevated temperature.

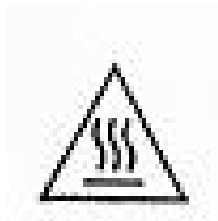

Caution: Hot surface



Äquipotentialität



Non-ionizing electromagnetic radiation

* Please do NOT place food in direct contact with the shelf.

KEEP THIS OPERATING MANUAL!

Contents

- Structure and Components
- Setup and Power Supply
- Assembly and Commissioning
- Cleaning and Maintenance
- Warnings
- Technical Specifications
- Principle of the Display and Circuit Diagram

Structure and Components

Side glass: Side glass

Front curved glass: Curved front glass

Seal: Gasket

Shelf: Shelf

Ventilation panel: Ventilation panel Body

box: Body box

Temperature display: Temperature

display Light cover: Light cover

Shelf bracket: Shelf bracket

Water bowl: Water bowl

Ventilation: Ventilation

Glass screw: Glass screw



*To avoid hazards and ensure optimal efficiency, please do not make any modifications or alterations to the device without the manufacturer's consent.

Please use the device only in a technically suitable environment and under safe conditions.

*Never leave the device unattended while it is in operation. Also, keep it out of the reach of children.

*Keep the user manual in a safe place. If you transfer or sell the device, the user manual must be included with the device.

*For their own safety, all users of the device must follow the instructions in the manual.

*The device is intended for indoor use only.

*Any type of intervention, including installation and maintenance, requires the assistance of a qualified service technician.

Setup and Power Supply

Dedicated Outlet

The power supply must have a secure, grounded connection.

Safety Cable

Never damage the cord, as this can cause a fire.

Do Not Split the Outlet

Never plug the device into the same outlet as another electrical device. This can cause the cable to overheat and ultimately result in a fire.

Do not rinse with water

Never rinse the surface of the device with water, as this can cause a permanent leak.

Keep out of reach of flammable and explosive materials

Keep the unit out of reach of flammable and explosive materials such as ether, gasoline, alcohol-based adhesives, and explosives. Never place hazardous products within reach of the heating element.

Installation and Commissioning

Installation

- * Always place the unit on a heat-resistant, stable, and level surface.
- * Never place the unit on flammable surfaces (e.g., cloths, carpets, etc.).
- * Do not place the device within reach of fireplaces, electric stoves, heaters, melting furnaces, or other heat sources.
- * Position the unit so that it can be easily unplugged.

Setup

- * Please clean the interior and the grate with a soft cloth and a mild detergent. Allow it to dry thoroughly.
- * Remove the water tray from the appliance. The water tray is attached to the inside of the appliance and then filled with water.
- * Plug the appliance into a single-grounded outlet.
- * Set the desired temperature for the specific foods. The temperature should be within the appropriate range of 30°C–90°C.
- * The temperature inside the appliance can be read on the external display.
- * Place the food in a suitable container before placing it inside the heating element and close the sliding door.
- * Some parts of the appliance become hot during operation. For your safety, always wear oven mitts when placing food inside or removing it.
- * The food will be kept warm at the temperature you set.
- * To remove the food, please open the door on the back.
- * If needed, turn on the light by pressing the light switch on the appliance.
- * Unplug the appliance from the outlet when not in use.

Cleaning and Maintenance

- * Before you begin repairs or cleaning, make sure the appliance is completely

unplugged and has cooled down.

- * Please do not use acidic cleaning agents, and do not allow water to enter the device.
- *For your own safety, never immerse the device, the cables, or the plugs in water or other liquids.
- *Do not use a high-pressure water jet to clean the device.

Cleaning

- * Please clean the device regularly.
- *Clean the device inside and out with a soft, damp cloth and a mild detergent.
- *Clean the inner mesh and the housing with a soft, damp cloth and a mild detergent.
- *Clean the water bowl regularly. Please remove limescale from the water bowl using a standard cleaning agent or liquid.
- *Use only soft cloths and avoid harsh cleaning agents that could scratch the surface.
- *After cleaning, use a soft, dry cloth to wipe down the surface.
- *Make sure the device is completely clean before putting it back in place.

Maintenance

- *Check the main power cord for damage from time to time. Never use the appliance if the main power cord is damaged. If damaged, it must be replaced by a qualified electrician.
- * Only a qualified technician should perform repairs and maintenance on the appliance. Do not attempt to repair the appliance yourself.
- * If the power cord of this appliance is damaged, it must be replaced by the manufacturer, its customer service department, or a similarly qualified person to avoid hazards.
- * Children in the vicinity of the device must be supervised to ensure they do not play with it.

Technical Specifications

<u>Wärmevitrine</u>	
Artikel-Nr. :RTR-105L	<u>Nennspannung</u> (V): 220-240~
Nennfrequenz (Hz): 50	Schutzklasse gegen elektrischen Schlag: I
<u>Kühltemperatur</u> (°C): 30-100	<u>Stromstärke</u> (A):3.5
Lagergröße (L):105	Leistung (W) : 800
IPX4	
<u>Produktionsdaten</u> & <u>Seriennummer</u> :	  
<u>Ningbo</u> ROTOR Electrical Appliances Co., Ltd. West Zone Industrial Park, <u>Guanhaiwei Cixi</u> 315315 P. R. China	

<u>Wärmevitrine</u>	
Artikel-Nr. :RTR-105L-1	<u>Nennspannung</u> (V): 220-240~
Nennfrequenz (Hz): 50	Schutzklasse gegen elektrischen Schlag: I
<u>Kühltemperatur</u> (°C):30-100	<u>Stromstärke</u> (A):1.7
Lagergröße (L):53	Leistung (W) : 400
IPX4	
<u>Produktionsdaten</u> & <u>Seriennummer</u> :	  
<u>Ningbo</u> ROTOR Electrical Appliances Co., Ltd. West Zone Industrial Park, <u>Guanhaiwei Cixi</u> 315315 P. R. China	

<u>Wärmevitrine</u>	
Artikel-Nr. :RTR-105L-3	<u>Nennspannung</u> (V): 220-240~
Nennfrequenz (Hz): 50	Schutzklasse gegen elektrischen Schlag: I
<u>Kühltemperatur</u> (°C): 30-100	<u>Stromstärke</u> (A):5.2
Lagergröße (L):158	Leistung (W) : 1200
IPX4	
<u>Produktionsdaten</u> & <u>Seriennummer</u> :	  
<u>Ningbo</u> ROTOR Electrical Appliances Co., Ltd. West Zone Industrial Park, <u>Guanhaiwei Cixi</u> 315315 P. R. China	

Environment



The meaning of the crossed-out trash can symbol:

Do not dispose of electrical appliances in household trash; use the collection points in your municipality.

Ask your local government for the locations of the collection points.

If electrical appliances are disposed of improperly, hazardous substances can leach into the groundwater during decomposition and thus enter the food chain, or poison flora and fauna for years to come.

If you replace the appliance with a new one, the seller is legally required to accept the old one for disposal at no cost to you.



GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.ggmgaastro.com info@ggmgaastro.com
+49 2553 7220 0