

210.00 mm

ggmgastro

USER MANUAL



MODEL:WK17SS



MODEL:WK17BS

Electric Kettle

145.00 mm

INTRODUCTION

Please read this instruction before using this electric kettle. Keep this manual for daily reference.

PRODUCT FEATURES

1. Fast boiling
2. With dry boil protection device
3. 360 degree rotation
4. With elegant design
5. Keep warm function

GUIDELINES BEFORE USING

1. Please check the product is in the good condition.
2. Please check the product rating meet the national power supply requirement.
3. The product only can function when the jug kettle is place on the base.
4. Clean the jug kettle before use.
5. Do not put water above maximum line.
6. Suggested to pour away the first boiled water.
7. Do not reboil the water for many times, regularly change the water for healthy life.

METHOD OF USE

1. DO NOT plug the power cable into the wall socket before filling, emptying and cleaning the appliance.
2. DO NOT fill water lower than the minimum volume or higher than the maximum volume as indicated by the lines drawn on the Kettle Jug before boiling. Close the Lid tightly.
3. Wipe the exterior of the Kettle Jug & Base using a soft, dry cloth if water has spilled onto the appliance.
4. Place the Base on a dry, horizontal, stable and heat-resistant surface. Damage may occur if the appliance is placed on an incline or decline.
5. Place the Kettle Jug onto the Base securely. Plug the power cable attached to the Base into the wall socket. Switch the wall switch ON.
6. The appliance will beep once, all display lights will illuminate for 1 second and the appliance enters Standby mode. The Control Panel will display the temperature of the water in the Kettle Jug. After 1 minute in Standby mode with no input, the appliance will shut down.

To Boil water

7. In Standby mode, press the "Boil/Cancel" button. The Boil Indicator Light flashes 5 times, the buzzer sounds 3 times as heating commences. The light remains illuminated and the Control Panel displays the current temperature of the water in the Kettle Jug throughout the heating process. Once boiling begins, the Boil Indicator Light stops illuminating, the buzzer sounds 3 times and the appliance switches off automatically.

1

To Re-boil water

8. Once the water has boiled, pressing the "Boil/Cancel" button will not restart the heating process if the temperature sensing controller determines that the temperature of the water is not cool enough to require heating. Wait a few minutes before pressing the "Boil/Cancel" button.

To Keep water Warm

9. In Standby mode, press the "Temperature Adjustment" button. The Keep Warm Light flashes. The Control Panel displays the default temperature of 45°C. Pressing the "Temperature Adjustment" button will display 55°C, 65°C, 75°C and 85°C. Stop pressing when the desired temperature is displayed. The Keep Warm Light flashes 5 times, the buzzer sounds 3 times as heating commences. The light remains illuminated and the Control Panel displays the current temperature of the water in the Kettle Jug throughout the heating process. Once the desired temperature is reached, the temperature will be maintained for 24 hours.

To Boil water and Keep water Warm

10. In Standby mode, press the "Boil/Cancel" button followed by the "Temperature Adjustment" button. The Control Panel displays the default temperature of 45°C. Pressing the "Temperature Adjustment" button will display 55°C, 65°C, 75°C and 85°C. Stop pressing when the desired temperature is displayed. Both the Boil Indicator Light & the Keep Warm Light flash 5 times, and the buzzer sounds 3 times as heating commences. Both lights remain illuminated and the Control Panel displays the current temperature of the water in the Kettle Jug throughout the heating process.

11. Once boiling begins, the Boil Indicator Light stops illuminating while the Keep Warm Light remains illuminated, the buzzer sounds 3 times and the temperature will decrease to the desired temperature. Once the desired temperature is reached, the temperature will be maintained for 24 hours.

To cancel boiling/heating

12. The heating process can be terminated at any time by lifting the Kettle Jug away from the Base. However, this is NOT recommended. You should:
Press the "Boil/Cancel" button, switch the wall switch OFF and unplug the power cable from the wall socket.

SPECIFICATIONS

Model	WK17SS / WK17BS
Rated Voltage	220-240V~
Rated Wattage	1500-1800W
Frequency	50-60Hz

2

GENERAL SAFETY PRECAUTIONS

1. This product is only for household use.
2. Before using this product, grounding device need to be checked on the power.
3. Before using this product, please confirm the power supply 220-240V~ 50-60Hz is same with local power supply.
4. Please use the product under the situation that the voltage on the rating is no less than 10% of the true outlet.
5. If the product's power cord is damage, user should contact factory to replace it.
6. Do not fill the water while the jug kettle is place on the base. Please make sure the base is dry.
7. Should not leave away while the kettle is operating.
8. Keep this product away from children to avoid any harm to them.
9. Please put this product away from other electronic product.
10. When user turns on this product, the lid should be covered and people should be away from it. DO NOT TOUCH ITS BODY when it is working and after water boiled.
11. Always keep the power cord , plug and base dry and clean.
12. Please do not put power cord near heating subject.
13. Do not turn on the power when no water inside kettle; do not turn on when it is being cleaning or anyone who is operating.
14. This product is for boiling plain water. Please do not put other chemical liquid in or else it will cause damage.
15. Do not repair by your own.
16. Every of this product has its own base, do not use this product by other base. Do not use other spare parts when not confirm
1) Beware the heating element surface is subject to residual heat after use
17. This appliance can be used by children aged from 8 years and above if they have been given supervision to use of the appliance in a safe way and if they understand the hazards involved.
18. Cleaning and user maintainance shall not be made by children unless they are older than 8 and under closed supervised.
19. Keep the appliance and its cord out of reach of children aged less than 8 years.
20. Children being supervised not to play with the appliance.
21. Appliances normally cleaned after use and not intended to be immersed in water for cleaning.

3

CARE AND CLEANING

Cleaning

- Always remove the plug from the mains supply before cleaning the appliance!
- The exterior of the machine should be cleaned, if necessary, with a slightly damp cloth without additives.
- Never put cleaning detergents into the kettle. This will make the operation unsafe and damage the unit.

Descaling

- Kettle should be descaled regular.
- For cleaning, use a special cleaner from scale.
- After that wash the kettle with clean water.

ggmgastro
INTERNATIONAL

GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.ggmgastro.com info@ggmgastro.com
+49 2553 7220 0



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

4