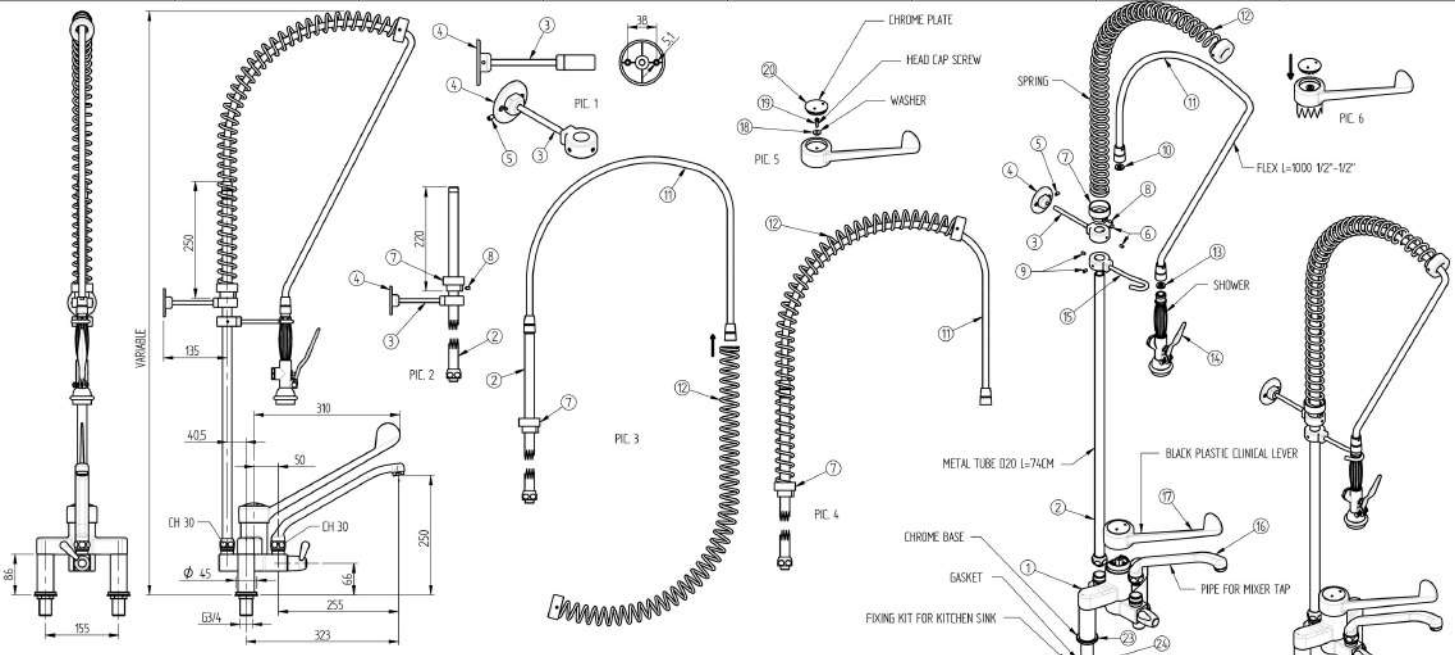

PRE-RINSE UNIT INSTALLATION:

1)take off the assembled tap (1) from the box
2) fix the swivel nozzle (16) into the body tap (1) and fix it with a spanner
3)remove chrome plate (20) from its place (pic. 5),fixing the clinical lever (17) to the cartidge and fix it with a screw (19) put the chromed plate (20) into the side of the clinical lever (pic. 6)
4)screw off the hexagon nut M30x1,5 (21) and take off the undulated spring washer (22) to fix it on the sink
5)insert the assembled tap (1) into the holes ø27 made on the sink,leaving the chrome base (23) and the gasket (24) on the same side to the body tap
6)fix the tap into the sink,inserting first the undulated spring washer (22) and fixing with the hexagon nut M30x1,5 (21)
7)fix the tube (2) into the body (1) and fix it with a spanner
8)install the spray gun bracket (15) into the metal tube (2) in order to fix the shower and pre-screw the knobs (9)
9)fix the rosone (4) into the bar (3) and fix it (5) (pic. 1)
10)put the bar (3) into the tube (2) in order to fix on the wall and pre-screw the knobs (6)
11)install the tongs place (7) into the tube (2) and fix it (8) at a distance of 220mm ca. (pic. 2)
12)fix the bar for the wall fixing (3) into the tube (2) throw the narrowing of the knobs (6) at the needed distance (pic. 2)
13)fix the gasket (10) and the flexible (11) into the tube (2)
14)insert the spring (12) (pic. 3) in order to put it in its place (7) (pic. 4)
15)fix the gasket (13) and the shower (14) to the other end of the flexible hose (11)
16)fix the bracket (15) into the tube (2) throw the narrowing of the knobs (9) at a distance that allow you to fix the shower
17)make sure that all components have been fixed in order to avoid leaks

GY4

ggmgastro

GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.ggmgastro.com info@ggmgastro.com
+49 2553 7220 0