


ggm gastro

OPERATION INSTRUCTIONS HAMBURGER MACHINE

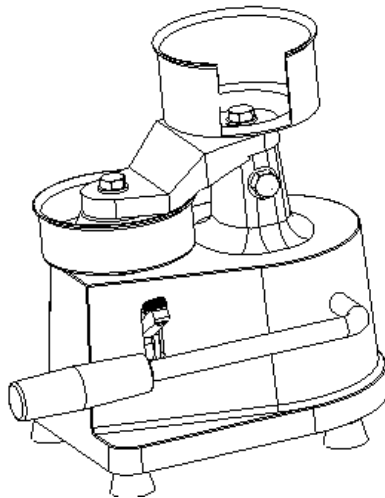

HMH100 / HMH130 / HMH150

INSTALLATION

- Install the machine onto a solid, stable, non-slip surface. This area should be large enough to allow easy access & cleaning.
- Put the cellophane discs into the holder at the top of the machine.

USE

- Put one cellophane disc into the holder.
- Then place a small quantity of minced meat, according to the thickness required
- Place another cellophane disc on the meat.
- Pull the lever down to form the hamburger.
- Lift the lever, which will lift the hamburger for easy removal.

CLEANING

Carefully clean the machine with damp cloth and then wipe off with a dry cloth.



GGM Gastro International GmbH
Weinerpark 16
D-48607 Ochtrup

www.ggmgaastro.com info@ggmgaastro.com
+49 2553 7220 0